


# UNBOXING INSTRUCTIONS

**Warning:** Do not power on your PC until you have completed the steps below.


**1**

Using a blade, cut the tape sealing the top of the box.

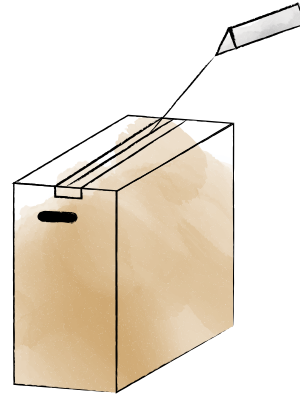


**2**

Fold the flaps on the top of the box outward.

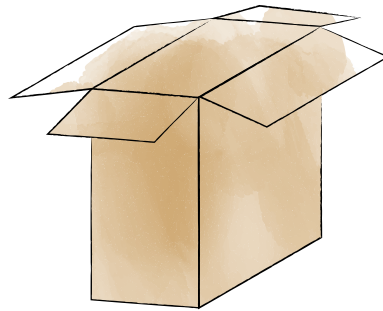

**3**


Gently flip the box upside down and pull upwards in a slow rocking motion.

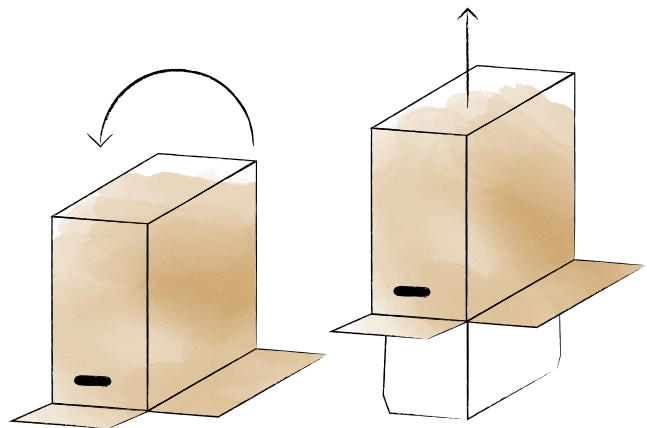

**CONTINUE** →


## 4

Remove foam pads and plastic bag from the computer and place your computer on its feet. **If your computer has a graphics card, you may continue to step five. If not, you are ready to boot up your PC.**

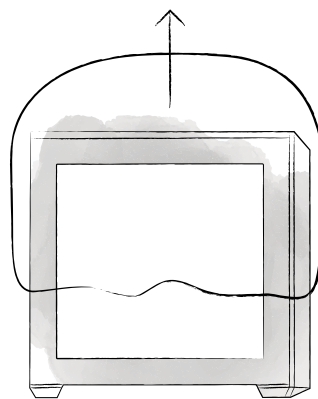


## 5

With the front of the computer facing you, remove the left side panel by unscrewing the two large thumbscrews located on the back of the computer **or** four large thumbscrews on the front of the tempered glass side panels. Once you have done so, carefully remove the side panel.

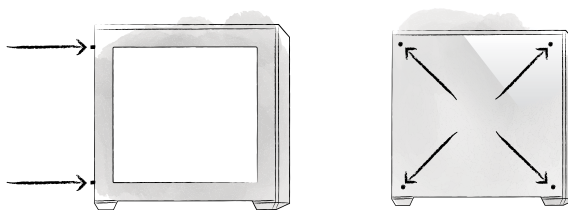


## 6

Gently remove the padding inside, pulling it forward in a slow rocking motion. Make sure the packaging material is not grabbing any of the internal components before completely removing it. **If your computer has Iron Tundra liquid cooling, you may now continue to the Filling Instructions sheet.**

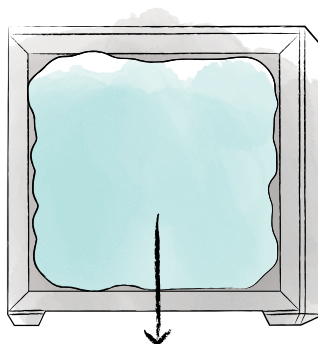

## 7

Put the side panel back into place and screw the thumbscrews into the proper holes.

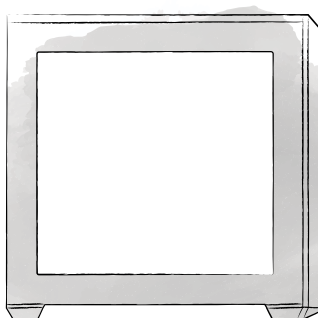

You are now ready to boot up your computer.  
Please refer to the Getting Started sheet for  
proper booting instructions.